

Multi Position Fixed Height - Trolley Mount 8996


- Max Capacity 100kg -Screens upto 86in

Safety instructions


Use the following safety guidelines to help protect your trolley from potential damage and to ensure your own personal safety.

- When adding a TV or any other equipment the party adding this TV or equipment is responsible for ensuring stability and safe operation of the trolley.
- The trolley must only be used on a flat floor area
- The trolley must not be moved over rough or uneven ground.
- The trolley must only be used indoors in a dry area.


1. Fix the legs to the base using the M10 x 40mm bolts with pre-applied thread lock provided.

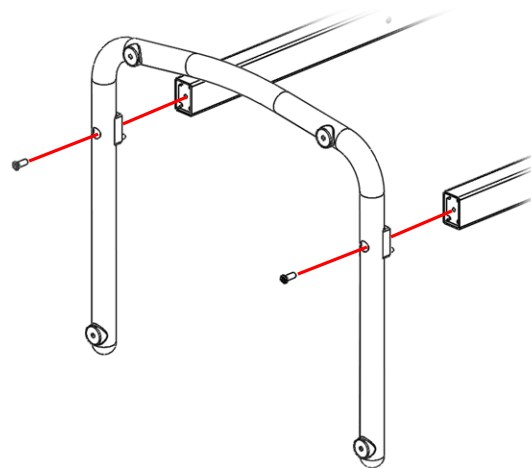


2. Secure the handle using eight M5*16 bolts.

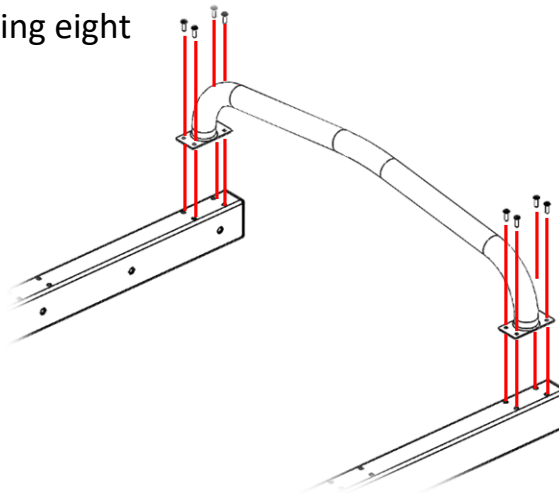


3. Fix the casters to the trolley base using four M10 x 30mm Bolts with pre-applied threadlock. Stand the trolley upright once the casters are mounted.

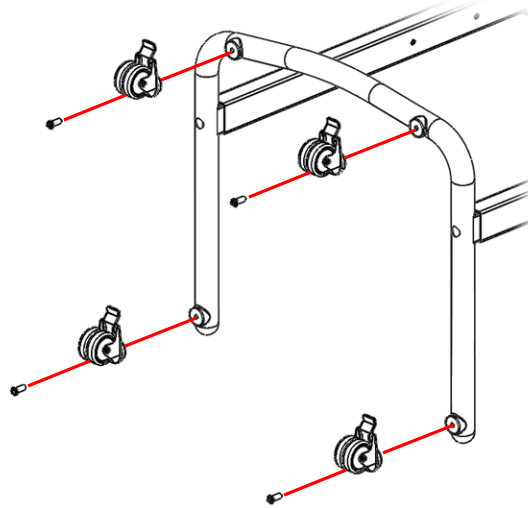


4. Fix the angle brackets to the legs using two M8 bolts per bracket, the brackets must be mounted in the fully vertical position. The angle brackets can be mounted at four different heights, fix the brackets at a height suitable for your requirements.

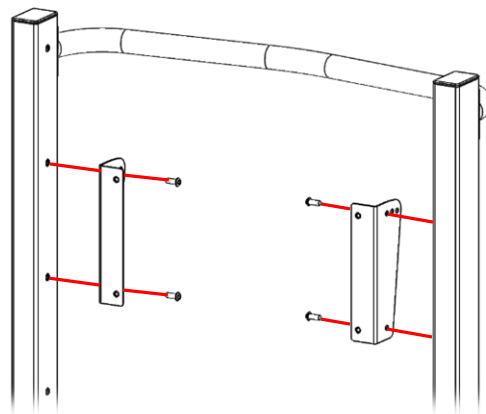


5. Bolt the mount plate in place using four M8*20 bolts.

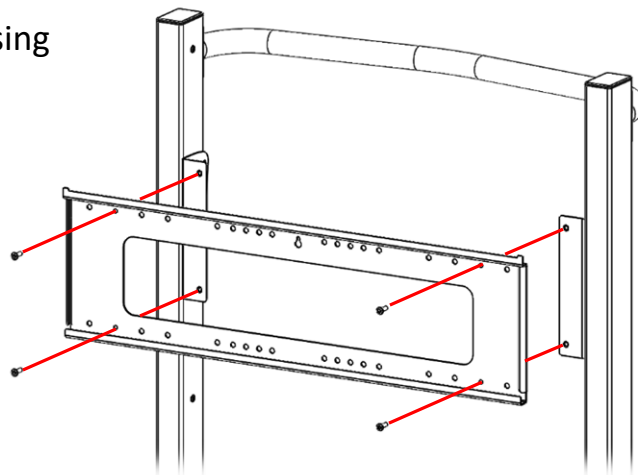

6. Fix the brackets to the back of the screen using fixings of an appropriate size and length for your screen. Ensure the brackets are as central as possible.

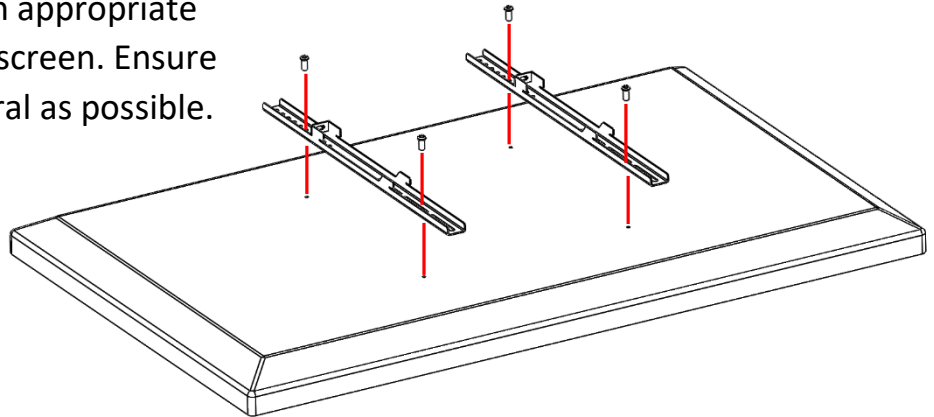

7. Make sure the casters on the base are locked, then hook the screen onto the mount plate.

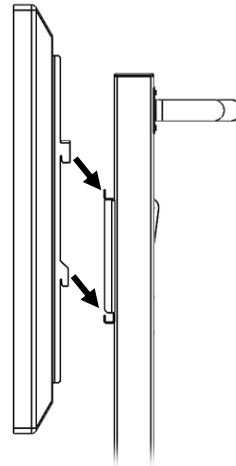

8. Secure the screen in place by fixing through the brackets into the mount plate, use the M5x50mm Bolts and washers provided.

