



Tabinet 10 Desktop- USB Charge 7784


1. Open the door of the cabinet and unscrew the two bolts indicated on the right side of the compartment. Then remove the charge cover by pulling it out.

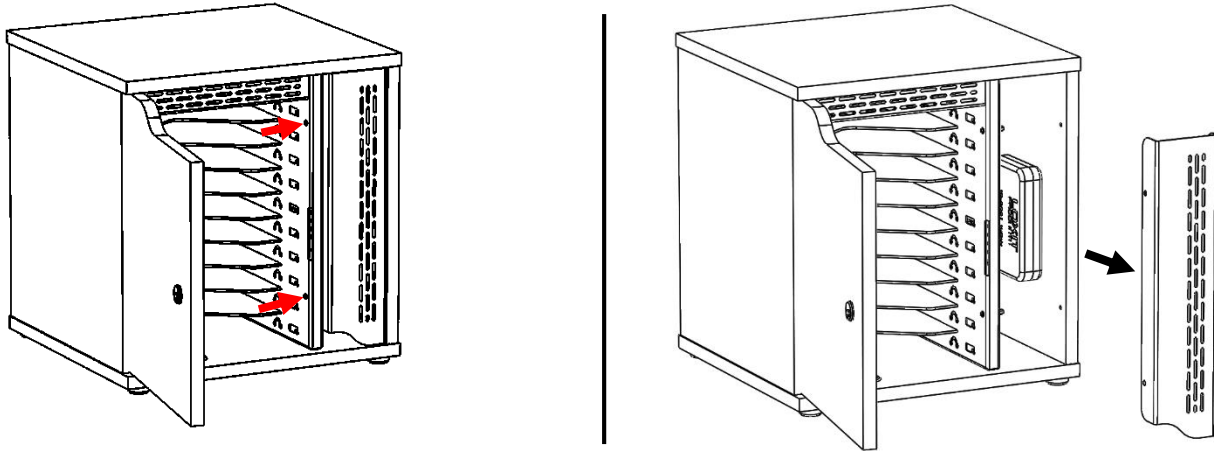


2. Inside the charging compartment insert a USB lead into the Loxit 10 port charger.

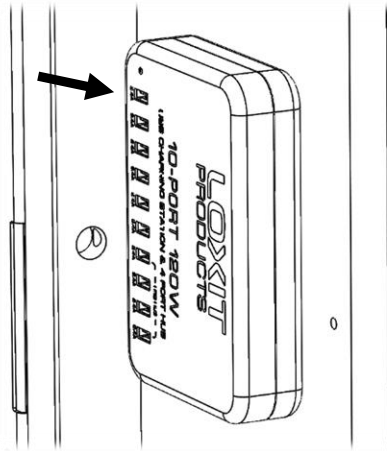


3. Pass the cable through the cut out as shown and pull it out to the correct length. Then secure the cable in place with a cable tie through the headphone shaped cut out. Repeat this for all the cables.

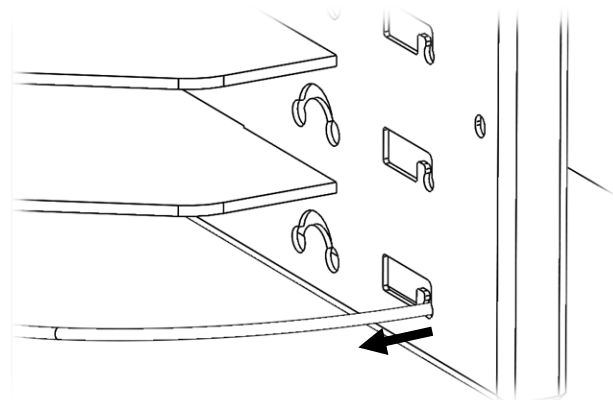

4. Once all the cables are in place, replace the charge cover and secure it in using the bolts removed in step 1.

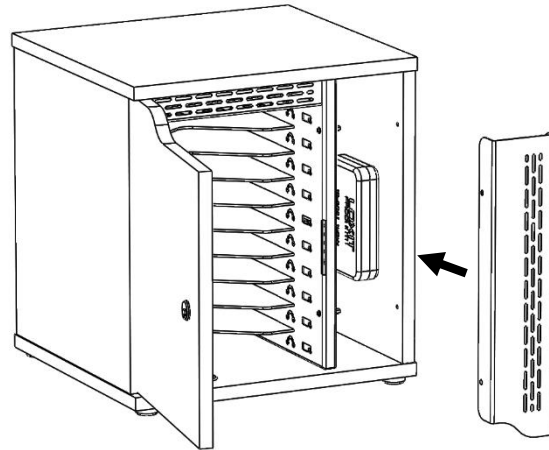

5. To begin charging, simply plug the IEC mains cable provided into the power input.

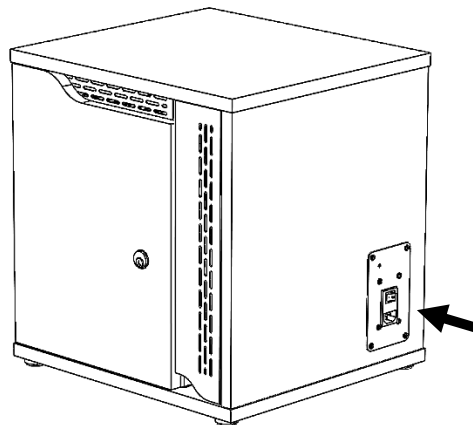

Wall mounting

If necessary the cabinet can be wall mounted, to do this remove the shelves by gently flexing them and popping them out of place. On the inside of the cabinet at the rear is a series of pre-drilled pilot holes, these can be drilled through and used to mount the cabinet to a wall. Do not overtighten wall fixings as this will lead to damage to the cabinet.